MOLEC-CHEF

Smoked Bubble Gun

Handheld Food Smoker

User manual



Translation of the manufacturer's manual, prepared by Délice Bar.

Contact

Délice Bar · contact@delicebar.fr · delicebar.fr

Charging the battery

To charge the battery of your Molec-chef Smoked Bubble Gun, connect the Type-C USB cable, correctly powered, to the Type-C USB input port. While the charging indicator is lit, the battery is charging. A full charge takes 8 hours and allows you to use your gun for several hours.

Please read and follow these warnings when charging your device

1. Only charge the gun with a high-quality CE & UL certified wall charger.
2. Never charge a battery that has been damaged or dropped.
3. Never plug a charger into a non-approved mains power transformer.
4. Do not overcharge: remove the Type-C USB cable from the gun when charging is complete, to prolong battery life.
5. Remove the tank before charging.
6. Never leave a charging battery unattended.
7. Only use the included high-quality Type-C USB charging cable.
8. Do not charge the gun in your car.
9. Remove the tank from the gun when shipping or travelling.
10. If there are any issues with the device, please contact Molec-chef or your retailer immediately.




- **Green light**
  Fully charged state
- **Yellow light**
  Charging status
- **Red light**
  Undervoltage state (battery low)

Overcharge protection

The gun monitors the battery voltage and automatically powers off when the battery is overcharged.

Parts list

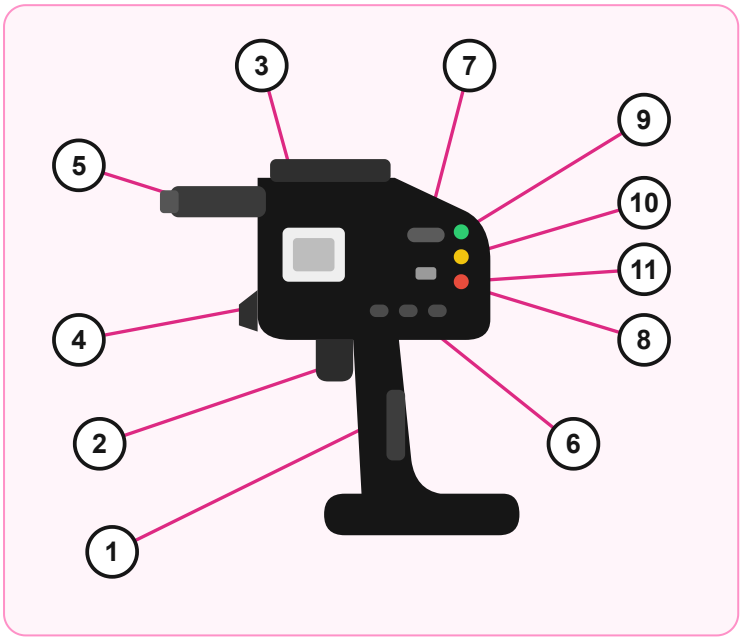

1. Shell handle
2. Trigger
3. Tank housing
4. LED
5. Nozzle
6. Ventilation holes
7. Type-C USB port
8. Switches
9. Fully charged indicator
10. Charging indicator
11. No power indicator



Kit contents

- ✓ 1 × gun
- ✓ 1 × tank
- ✓ 5 × aromas: strawberry, incense, orange, milk chocolate, mint
- ✓ 1 × storage bag
- ✓ 1 × USB-C cable
- ✓ 5 × coils
- ✓ 1 × 300 ml bottle of bubble liquid

Warning

Please read this section carefully to get the most out of your Molec-chef Smoked Bubble Gun and to enjoy the product in the safest, most effective way.

1. This gun is designed to be used with Molec-chef aromas (essential oils) and bubble liquid. It is also designed to be used with Flavour Blaster aromas and bubble liquid, which are fully compatible. It is not designed to be used with any e-liquids, loose tobacco leaf or herbal substances.

2. This product is intended for adults only (18+). It must not be used by children, by pregnant or breastfeeding women, by people with or at risk of heart disease, high blood pressure or diabetes, by people taking medicine for depression or asthma, or by anyone who may be sensitive to aromas (toxic by inhalation, in contact with the skin or eyes, or if swallowed). Ingesting the non-vaporized concentrated aroma ingredients can be poisonous. Keep away from children and pets.

3. Tanks and coils must be kept out of the reach of children and pets. All spare and used tanks and coils must also be disposed of properly and kept out of the reach of children and pets. The gun includes small parts such as the tank coil: always keep them out of reach of children and pets to prevent swallowing or other harm.

4. Do not misuse, mishandle or store your gun improperly. Even though it is made of durable plastic and metal, it may be damaged if dropped or otherwise mishandled. Do not drop or throw it: the casing or inner components may be damaged.

5. Do not attempt to repair the unit yourself, as damage or personal injury may occur.

6. To prolong the life of your gun, do not place or store it in excessively hot or cold environments. Keep it away from sources of excessive heat, which may damage it.

Warning

7. Your gun is not waterproof: keep it dry at all times, especially the USB port.

8. Do not allow any essential oil, bubble liquid or other liquid to enter the device through the USB port. If any liquid enters the device or comes into contact with internal components, stop using and charging it and contact Molec-chef immediately.


9. Molec-chef is not responsible for battery or charger explosions or malfunctions caused by the use of a low-quality charger. Only use the original Molec-chef Type-C USB cable to charge your gun. We strongly recommend always using a high-quality USB wall charger (CE/UL certified). The gun is not designed for use with a car charger, and the kit does not include one.

10. Molec-chef is not responsible for damage to the gun caused by the use of other brands or types of smoke oil (other than Flavour Blaster), tobacco leaves or other unknown products.

11. In case of aroma contact with the skin, wash immediately and thoroughly with soap and water. In case of contact with the eyes, rinse immediately and thoroughly with water and seek medical advice. In case of an accident, or if you feel unwell, seek medical advice.

12. If essential oils accidentally get into the eyes or mouth, rinse immediately with plenty of water and drink a glass of water. Do not induce vomiting. Rinse the skin and eyes immediately if the liquid comes into contact with them.

Start-up

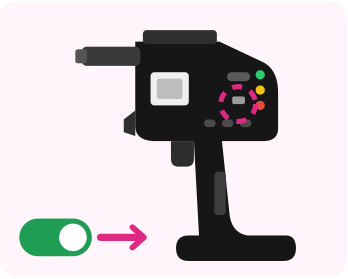


1 Switch on

Slide the switch to power the gun on.




2 Prime the coil & fill the tank

Pour the aroma into the tank. The amount of aroma should exceed the round hole of the heating core. Let it stand for 5 minutes.

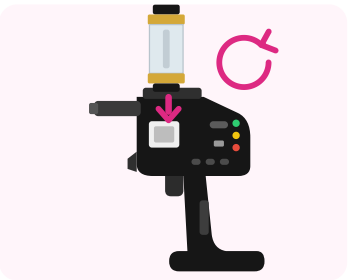

3 Insert the tank

Insert the tank and rotate it until it is firmly in place, so that smoke is generated properly.

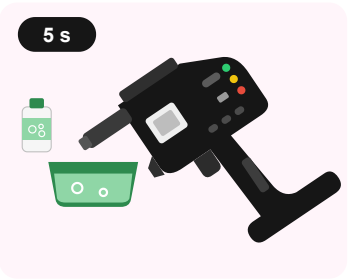

4 Dip the nozzle tip

Press the trigger to warm up for 5 seconds. Pour a little bubble liquid into the bottle's cap, which works as a small bowl, then dip the middle hole of the nozzle into it.



5 Hold the trigger


It creates aroma-filled bubbles.

What not to do




✗ Filling the tank

Pour the aroma into the outer chamber. Never into the central airflow hole.

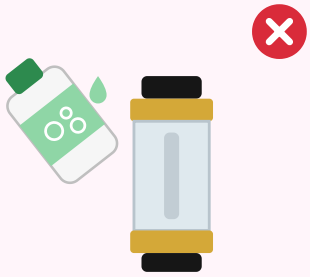


✗ No bubble liquid in the tank

To prevent damage to the tank and leaks.

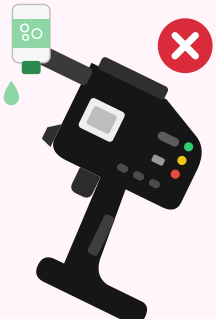

✗ Don’t tip the gun backwards


To prevent bubble liquid from leaking into the gun.

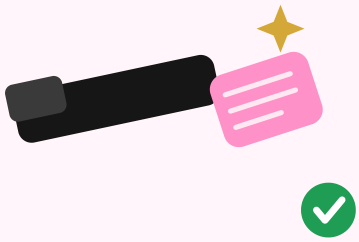

✓ Clean and dry the nozzle

After each session, to prevent liquid from flowing inside the machine. Never pour the bubble liquid into the nozzle.

Filling the tank ✓

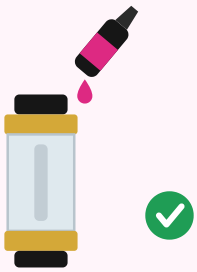

Pour the aroma into the outer chamber. Never into the central airflow hole.

Technical specifications

Battery (lithium-ion)	**2000–3000 mAh, 2 × 3.6 V (INR18650-3C)**
Output power	**15–80 W**
Output voltage	**0.2–12.0 V**
Output current (continuous)	**0.5–30.0 A**
Atomizer resistance (cold)	**0.2–1.0 Ω**
Temperature limit	**80–320 °C**
Input voltage (unloaded)	**3.0–4.2 V**
Input current	**9.0–30.0 A**
Quiescent current	**18 mA**
Efficiency	**85 %**

Safety

- Always store the gun in an upright position. This prevents any liquid from entering the casing. Power the gun on and off with the switch.
- Always power the gun off when it is not being used, and remove the tank.

Tank

- Do not pour alcohol into the tank: it can cause a fire.
- The tank and coil get hot during use: let the tank cool down before removing it from the gun.

Shipping & travelling

- Remove the tank when shipping or travelling, so that it cannot activate if the gun is turned on by accident.
- Follow the rules on shipping or travelling with a device that contains 2 permanently installed lithium-ion batteries.
- The batteries are not removable and are not loose in the device.